



## Removal

---


- 1 Remove both license plate lights.

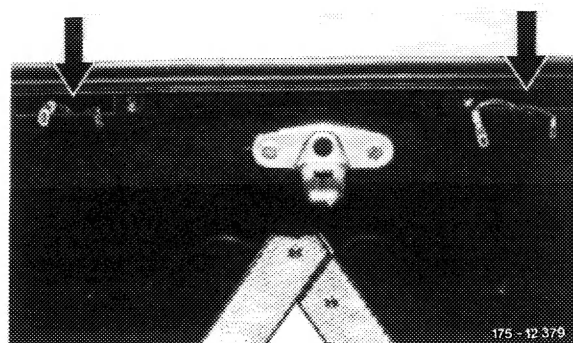


- 2 Remove trunk light with switch.
- 3 Unclip wires and pull out of trunk lid.

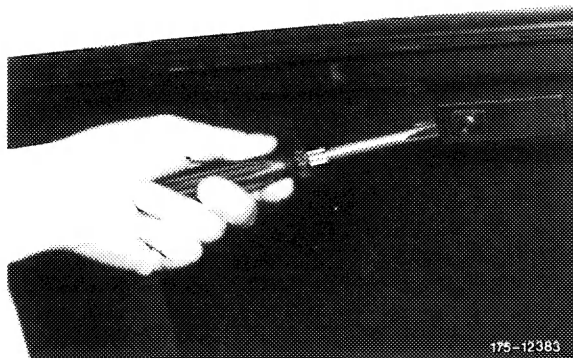

- 4 Place rags under both corners of trunk lid.

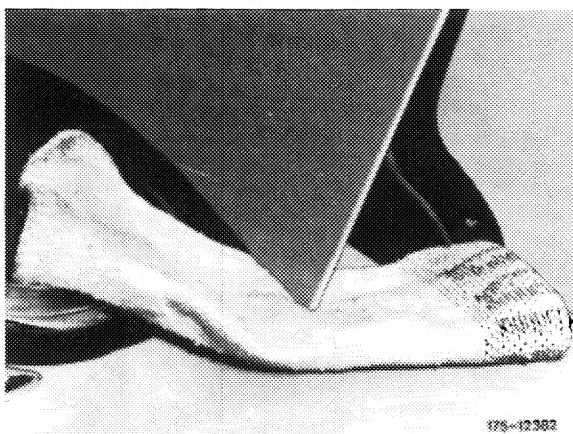

5 Unscrew both hinge screws on both sides and remove trunk lid.

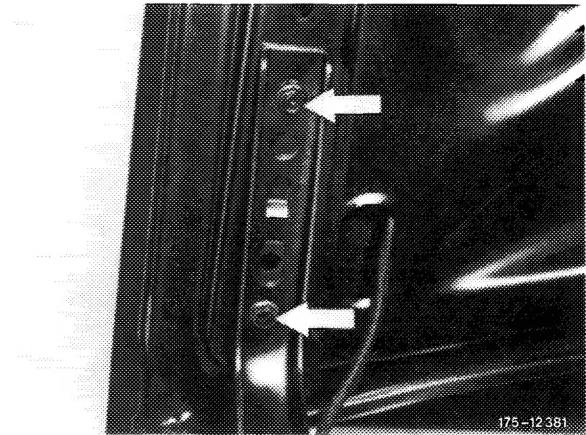


### Installation

---

6 Bolt trunk lid to hinges and align lid before tightening screws.

7 Adjust lock upper section by installation of spacers, so that lid opens and closes correctly.

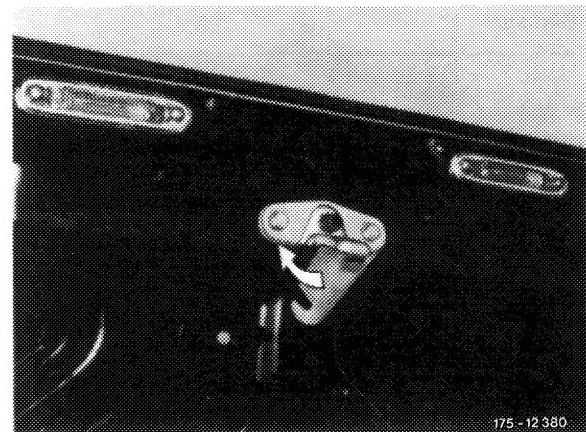

8 Continue installation in reverse sequence of removal.

**Note:** Check for leaks if trunk lid is replaced (97–830).